

Mechanically-activated, wide-angle pump switches that provide automatic control of pumps in sump applications up to 200°F (93°C).

The High Temperature mechanical pump switch consists of a float housing with a twin wall design. The switch is not sensitive to rotation or turbulence, allowing it to be used in both calm and turbulent applications.

#### **HIGH TEMPERATURE SWITCH** Mechanically activated pump and control switch for: Water Sewage applications Tether 12 9 15 18 3.5 Length Pumping 8 12 17 23 **30** 36 Range

NOTE: Pumping range listed above is a general guide. Actual pumping range will increase slightly based on the temperature of the water being controlled. Watch several cycles of operation to assure that the pumping range is accurate for your installation.

## PREVENTATIVE MAINTENANCE

- Periodically inspect the product. Check that the cable has not become worn or that the housing has not been damaged so as to impair the protection of the
  product. Replace the product immediately if any damage is found or suspected.
- Periodically check to see that the float is free to move and operate the switch.
- Use only SJE-Rhombus® replacement parts.

## **CSI CONTROLS® THREE-YEAR LIMITED WARRANTY**

**CSI Controls**® warrants to the original consumer that this product shall be free of manufacturing defects for three years after the date of consumer purchase. During that time period and subject to the conditions set forth below, **CSI Controls**® will repair or replace, for the original consumer, any component which proves to be defective due to defective materials or workmanship of **CSI Controls**®.

ELECTRICAL WIRING AND SERVICING OF THIS PRODUCT MUST BE PERFORMED BY A LICENSED ELECTRICIAN.

THIS WARRANTY DOES NOT APPLY: (A) to damage due to lightning or conditions beyond the control of CSI Controls®; (B) to defects or malfunctions resulting from failure to properly install, operate or maintain the unit in accordance with printed instructions provided; (C) to failures resulting from abuse, misuse, accident, or negligence; (D) to units which are not installed in accordance with applicable local codes, ordinances, or accepted trade practices, and (E) to units repaired and/or modified without prior authorization from CSI Controls®.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

**TO OBTAIN WARRANTY SERVICE:** The consumer shall assume all responsibility and expense for removal, reinstallation, and freight. Any item to be repaired or replaced under this warranty must be returned to **CSI Controls**®, or such place as designated by **CSI Controls**®.

ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS ARE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. CSI CONTROLS® SHALL NOT, IN ANY MANNER, BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES AS A RESULT OF A BREACH OF THIS WRITTEN WARRANTY OR ANY IMPLIED WARRANTY.

#### **AWARNING**

 
# **ELECTRICAL SHOCK HAZARD**

〉淵

Disconnect power before installing or servicing this product. A qualified service person must install and service this product according to applicable electrical and plumbing codes.

# AWARNING

## **EXPLOSION OR FIRE HAZARD**



Failure to follow these precautions could result in serious injury or death. Replace product immediately if switch cable becomes damaged or severed. Keep these instructions with warranty after installation. This product must be installed in accordance with National Electric Code, ANSI/NFPA 70 so as to prevent moisture from entering or accumulating within boxes, conduit bodies, fittings, float housing, or cable.

#### **MOUNTING THE SWITCH**



The installation site may be HOT. Assure that the installation site is cool to the touch prior to installing to avoid being burned.


- Determine the required cord tether length according to product specifications on the front page and as shown in Figure A.
- Refer to Figure B. A.)Place clamp onto cord. B.)Place the clamp onto threaded stud. C.)Place the locking nut onto threaded stud and tighten. D.)Thread band of hose clamp through slots of mounting clip.
- Locate clamp assembly at desired activation level and secure the hose clamp to the discharge pipe as shown in **Figure B**.

**Note:** Do not install cord under hose clamp.

- Tighten the hose clamp using screwdriver. Over tightening may result in damage to the clamp components. Make sure the float cable is not allowed to touch the excess hose clamp band during operation.
- Follow direct wire or piggy-back plug instructions for further installation.

Note: All hose clamp components are made of 18-8 stainless steel material. See your CSI Controls® supplier for replacements.

Figure A

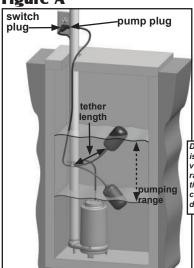

## **PIGGY-BACK PLUG INSTALL**

- Electrical outlet must not be located in pump chamber.
- Electrical outlet voltage, piggy-back plug voltage, and pump voltage must match.
- 1. Follow steps 1 through 4 of "Mounting The Switch."
- 2. Insert switch's piggy-back plug into outlet as shown in Figure A.
- 3. Plug pump into piggy-back plug as shown in Figure A.
- 4. Check installation. Allow system to cycle to insure proper operation.

#### **DIRECT WIRE INSTALL**

- 1. Follow steps 1 through 4 of "Mounting The Switch."
- 2. Wire switch as shown in Figure C.
- 3. Check installation. Allow system to cycle to insure proper operation.

# Figure B


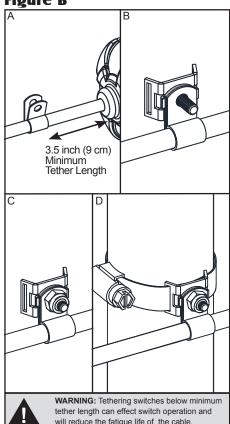


Figure C

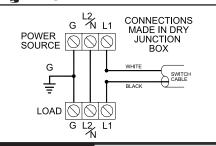

AWARNING

In 230 VAC installations, one side of the line going to the load is always <u>HOT</u>. This condition exists if the switch is on or off. Install double pole disconnect on all 230 VAC circuits.

Ensure cable connections are performed in a <u>dry</u> junction box or other watertight seal that seals both conductors and cable jacket. Failure to do so could result in electrical shock hazard and/or water traveling down cable and entering the switch. Failure to quard against this may effect switch performance.

Due to weight of cable, pumping range <u>above</u> horizontal is NOT equal to pumping range <u>below</u> horizontal. Use values published on front page as a guide. Pumping ranges are based on testing in non-turbulent conditions. Range may vary due to water temperature and cord shape. Note: As the tether length increases, so does the variance of the pumping range.



220 Ohio Street ■ Ashland, OH 44805 USA Phone: 419-281-5767 ■ Fax: 419-289-2535